

**Haltr**

**Mounting:** unscrew the nut and washer from the halter, insert the halter from the inside of the rim of the correct size into the hole provided for this purpose, insert the washer from the outside of the wheel and screw on the nut and tighten it.

**Maintenance:** if there is any damage to the halter, replace it, keep checking the tightening.

**Dispose of the product environmentally at the end of its life.**

**Country of origin:** TCHAJWAN

**Importer:** MEFO SPORT CENTRUM s.r.o., Jinín 60, Strakonice 38601, [www.mefo.cz](http://www.mefo.cz)