


# HONDA NX/DOMINATOR FUEL TANK 23 L.

## SERBATOIO HONDA NX/DOMINATOR 23 L.

**ACERBIS®**


COD. 000005855 REV.3

### ACERBIS PARTS

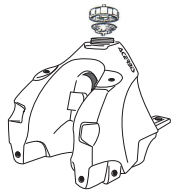

**A** - (1 pcs.)

 **C** - (1 pcs.)



**B** - (1 pcs.)



**E** - (2 pcs.)



**G** - (6 pcs.)



**I** - (1 pcs.)



**M** - (2 pcs.)



**O** - (1 pcs.)



**D** - (2 pcs.)



**F** - (2 pcs.)



**H** - (6 pcs.)



**L** - (6 pcs.)



**N** - (2 pcs.)



**P** - (1 pcs.)

### O.E.M ITEMS TO USE



**1** - (1 pcs.)






**1** - (1 pcs.)



(2 pcs.)



(2 pcs.)

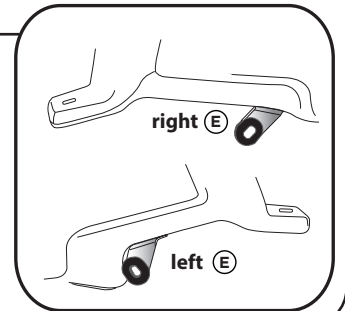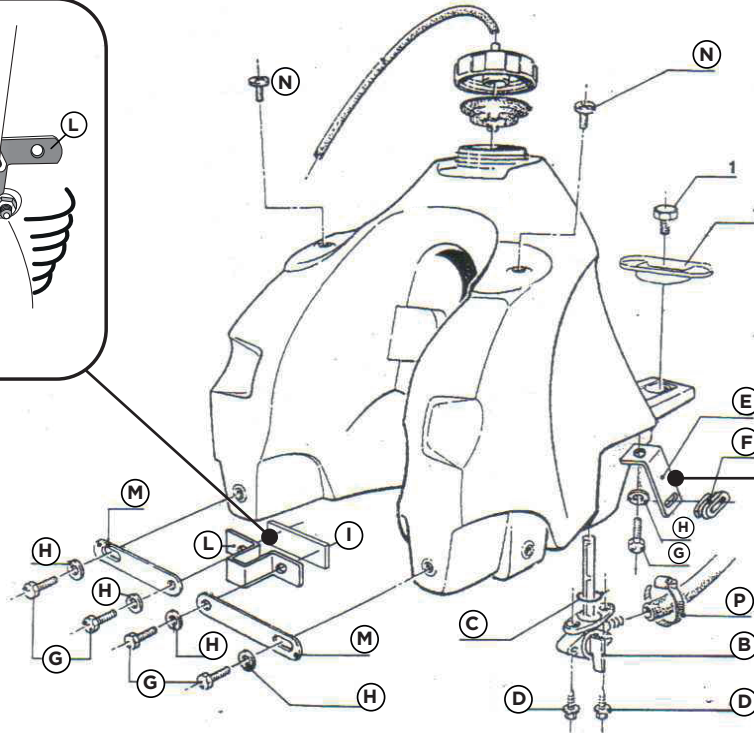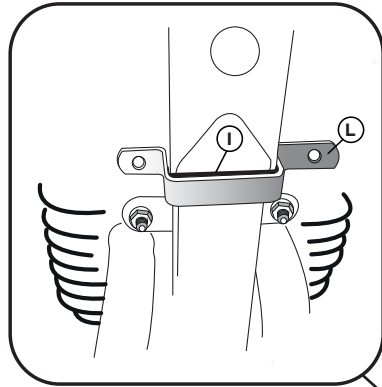

### MOUNTING INSTRUCTIONS

#### ISTRUZIONI MONTAGGIO

- 1-** Togliere i fianchetti e la sella originali.
- 2 -** Svitare le viti di fissaggio della carenatura.
- 3 -** Smontare l'attacco posteriore 1 e togliere il serbatoio originale.
- 4 -** Scollegare il tubo benzina e i 2 tubi sfiato.
- 5 -** Montare il rubinetto B al serbatoio A, utilizzando la guarnizione C e le viti D.
- 6 -** Montare al serbatoio A le staffe E, i gommini F utilizzando le viti G e le rondelle H.
- 7 -** Montare il serbatoio A e bloccarlo utilizzando l'attacco originale 1.
- 8 -** Applicare la spugna adesiva I alla staffa L, quindi fissare le staffe L e M utilizzando le viti G e le rondelle H.
- 9 -** Fissaggio carena: parte inferiore usare viti originali. Parte superiore usare le viti N.
- 10 -** Collegare il rubinetto B al tubo benzina utilizzando la fascetta P.
- 11 -** Rimontare la sella e i fianchetti.



**Thank you** for purchasing an ACERBIS fuel tank

## WARNING

It is **EXTREMELY IMPORTANT** that the fuel tank be properly installed. To ensure proper installation, it is **STRONGLY RECOMMENDED** that the tank be installed only by a qualified OEM licensed dealership mechanic. Improper installation could result in serious injury or even death.

**If self-installed NOTE THE FOLLOWING.** Particular attention must be paid to excessive fuel line length and fuel line proximity to hot engine areas and pipes to prevent fire.

Clean tank interior thoroughly before installation. Install this fuel tank only in a well ventilated area, as gasoline fumes are extremely dangerous. Do not start or operate the vehicle if there are any fuel leaks! Read all instruction first before beginning installation.

## DISCLAIMER

Due to uncontrolled variables in the manufacturing process of rotationally molded fuel tanks, the fuel tank may vary in size and shape by up to 7% of the manufacturer's original listed capacity.